

Installation & Operation Manual

Guangdong Growatt New Energy Co., LTD

No.28 Guangming Road, Shiyan Street, Bao'an District, Shenzhen, PR. China

T : +86 0755 2747 1942

E : service@ginverter.com

W : www.ginverter.com

目录

1. Overview	5
1.1 Product Overview	5
1.2 Applicable Personnel	5
2. Safety Precautions	5
2.1 Safety Overview	5
2.2 Symbol Conventions	7
2.3 Label Description.....	8
3. Product Introduction.....	9
3.1 Appearance	9
3.2 Basic Data.....	10
3.3 Nameplate	11
3.4 Working Principle.....	11
3.5 Inverter Storage	12
3.6 Grid Types	12
3.7 AFCI Detection Function.....	13
3.8 Anti-PID Function.....	13
4 Unpacking.....	13
5. Installation.....	14

5.1 Basic Installation Requirements.....	15
5.2 Installation Environment Requirements.....	16
5.3 Moving Requirements.....	18
5.4 Wall Mount Bracket Installation.....	19
5.5 Installing The Inverter.....	20
6. Connecting Cable.....	21
6.1 Connection on AC side.....	21
6.2 Connection On DC Side.....	25
6.3 Connection Of Communication Cables.....	26
6.3.1 RS485 port.....	26
6.3.2 USB port.....	28
6.4 Connecting The Ground Cables.....	29
7. Commissioning.....	31
7.1 Commission The Inverter.....	31
7.1.1 Set inverter address.....	31
7.1.2 Set inverter time and date.....	33
7.2 Operation Mode.....	33
7.2.1 Waiting mode.....	33
7.2.2 Working mode.....	33

7.2.3 Fault mode	34
7.2.4 Off mode	34
7.3 LED Display	34
8 Remote Data Monitoring	36
8.1 Remote Data Monitoring	36
8.1.1 Mobile phone APP(ShinePhone) remote monitoring.....	36
8.2 Local Data Monitoring.....	39
8.2.1 Mobile phone app (Shinephone) Local Monitoring.....	39
8.2.2 U Disk Monitoring.....	44
9. System Maintenance.....	46
9.1 Routine Maintenance.....	46
9.1.1 Cleaning Inverter	46
9.1.2 Fan Maintenance.....	46
9.2 Trouble Shooting.....	49
9.2.1 Warning.....	49
9.2.2 Error.....	50
10. Specification	51
11. Decommissioning.....	55
12. Quality assurance.....	56
13. Contact.....	56

1. Overview

1.1 Product Overview

This manual is aimed at providing sufficient information and installing instruction for consumers buying Shenzhen Growatt New Energy Co., Ltd (short as Growatt) MAX 80-150KTL3-X LV/MV Series solar inverters. Please read this manual carefully before using the MAX 80-150KTL3-X LV/MV series inverters and store the manual in a reachable place for an authorized technician. No further notice if there is any change in this manual.

1.2 Applicable Personnel

Only qualified electrical technicians are allowed to install MAX 80-150KTL3-X LV/MV series inverter. With reading through this manual and following all the precautions, qualified electrical technician can properly install MAX 80-150KTL3-X LV/MV serial inverter, finish trouble shooting and communication settings. If there is any problem during the installation, the installer can either log on www.ginverter.com and leave a message or call consumer service hotline +86 75527471942.

2. Safety Precautions

2.1 Safety Overview

- 1> Before installation please make sure reading through this manual, any damage caused by improper installation, Growatt reserve the right to disclaim any warranty.
- 2> All the operations and connections must be done by trained qualified electrical technician.
- 3> During installation except for terminals, do not touch any inside part of the inverter.
- 4> All the electrical connections must meet local country's safety regulations.
- 5> If you need maintenance for this inverter, please contact our local authorized installing and maintenance technician.

6> You must get the local power supplier's permit before connecting this inverter to the grid.

Handle Process :

	<ul style="list-style-type: none"> ●The inverter is heavy, please treat with care while handling, in case of crushing injury.
---	--

Installation :

	<ul style="list-style-type: none"> ●Before installation, please read through this manual, any damage cause by improper installation, Growatt reserve the right to disclaim any warranty.
	<ul style="list-style-type: none"> ●Ensure that the MAX is not connected to a power supply and is not power on before installation.
	<ul style="list-style-type: none"> ●Please follow this installation manual as installation condition Environment, space and so on. ●Please install the inverter in a dry and ventilated environment, otherwise may affect the performance of the inverter. ●Please follow the installation procedures in this manual.

Electrical Connections:

	<ul style="list-style-type: none"> ●Before electrical connection, please ensure the inverter DC switch is at "OFF" also disconnect AC switch, otherwise the high voltage from inverter may cause life risk. ●Only trained authorized electrical technician can do the electric connection also please follow the connection procedures in this manual along with local country's regulations. ●High voltage may cause electric shocks and serious injury please do not touch the inverter. ●Please do not store inverter in area with flammable and explosive material.
	<ul style="list-style-type: none"> ●Each inverter must install one AC breaker; AC breaker is forbidden to share with other inverters. ●It is forbidden to add load between inverter and breaker. ●If the cable is thick, after tightening the cable do not shake it and ensure the cable is well-connected and then start the inverter. Loose connection may cause overheat. ●Before connecting between PV panels and inverter please ensure the positive and negative poles are correct connected.

Maintenance and replacement:

 <p>DANGER</p>	<ul style="list-style-type: none"> • Must be installed by trained and authorized electrical technician and accurately follow this manual. • Please disconnect the DC and AC switch for at least five minutes, all the operations should be carried after power disconnection. • If there is PV isolation low alarm, the inverter case may be ungrounded, please do not touch the inverter case. • High voltage of inverter may result in electric shock.
 <p>WARNING</p>	<ul style="list-style-type: none"> • For better cooling purpose, please regularly clean the fans. • Do not use air pump to clean the fans, cause it may damage the fans.

Other :

	<ul style="list-style-type: none"> • After you receiving the inverter please check the packing materials for damage, if there is any damage please contact your supplier.
--	--

 <p>WARNING</p>	<ul style="list-style-type: none"> • The Max PV input voltage should not exceed 1100V. • For the disposed inverter, the consumer should dispose it according to local disposal rules for electrical equipment waste.
--	--

2.2 Symbol Conventions

Symbol	Description
 <p>DANGER</p>	<p>Indicates an imminently hazardous situation which, if not avoided, will result in serious injury or death.</p>
 <p>WARNING</p>	<p>Indicates potentially hazardous situation which, if not avoided, will result in serious injury or death.</p>

 CAUTION	Indicates potentially hazardous situation which, if not avoided, will result in minor or moderate injury.
 NOTICE	Indicates certain hazardous situation which, if not avoided, will Result in property damage.
	Reminds operator to read installation manual before operating or installing inverter.

2.3 Lable Description

Symbol	Name	Meaning
	High Voltage Electric Shock	Inverter operating with high voltage, any operation regarding inverter need to be done by trained and authorized electrical technician.
	Burn Warning	Do not touch a running inverter cause it generates high temperature on the case.
	Protective Grounding	Connect inverter to grounding bar.
	Delay discharge	Residual voltage exists after the inverter is powered off, it takes 5 minutes for the inverter to discharge to the safe voltage.
	Read the installation manual	Reminds operator to read installation manual before operating or installing inverter.
	DC	Means this terminal is for DC side.
	AC	Means this terminal is for AC side.
	CE Mark	The inverter complies with the requirements of the applicable CE guidelines.

3. Product Introduction

3.1 Appearance

Front view:

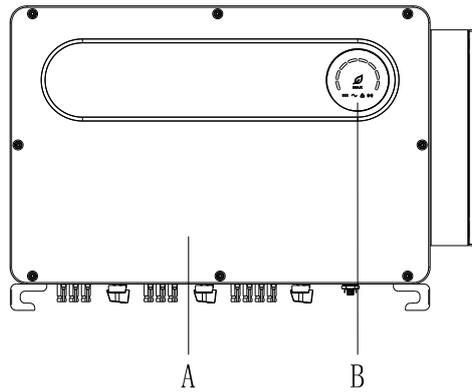


Fig 3.1

Bottom view (Terminal):

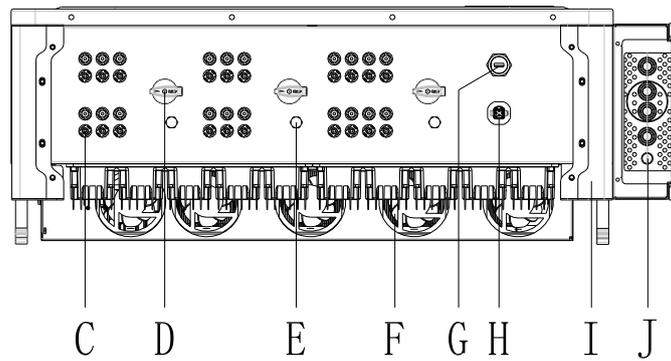


Fig 3.2

Mark	Description	Mark	Description
A	Front panel	B	LED

C	PV terminal	D	DC switch
E	Breathing valve	F	Safety ground screw
G	USB interface	H	COM interface
I	Corner guard	J	Waterproof silicone pad

3.2 Basic Data

Model	Size (mm)			Weight (kg)
	Width	Height	Thickness	
MAX 80-150KTL3-X LV/MV Series Inverter	970	640	345	84
MAX 80-150KTL3-X LV/MV Series Inverter with package	1100	760	500	93

3.3 Nameplate

GROWATT PV Grid Inverter	
Model name	MAX 125KTL3-X LV
Max. PV voltage	1100 d.c.V
PV voltage range	180-1000 d.c.V
PV Isc	40 d.c.A*10
Max. input current	32 d.c.A*10
Max. output power	125000 W
Max. apparent power	137500 VA
Nominal output voltage	3W/N/PE 230/400 a.c.V
Max. output current	208.9 a.c.A
Nominal output frequency	50/60 Hz
Power factor range	0.8leading~0.8lagging
Safety level	Class I
Ingress protection	IP66
Operation ambient temperature	-30°C - +60°C
VDE0126-1-1	
	
	
Made in China	

Note: Other models of MAX 80-150KTL3-X LV/MV series share the same label design with MAX 125KTL3-X LV, only with different model name and parameters, detail parameter please refer to specification in Chapter 10.

3.4 Working Principle

The MAX 80-150KTL3-X LV/MV series inverter works as follows:

- 1>The PV panels gather solar to generate DC power to inverter.
- 2>With input current detection circuit, it can monitor all the PV panels' working status and use MPPT to track the maximum power point.
- 3>With inverter circuit change DC power to AC power, and feed power back to grid per grid requirement.
- 4>With output isolation relay can isolate AC output and grid, if anything goes wrong on either inverter side or grid side, isolation relay can disconnect inverter immediately.

On-grid connection system diagram:

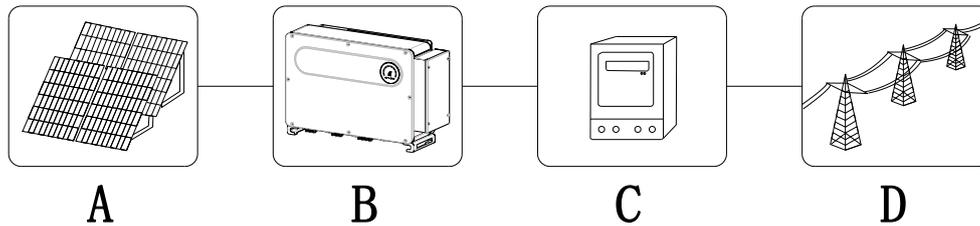


Fig 3.4

symbol	Description	symbol	Description
A	PV string	C	Electric meter
B	Inverter	D	Gird

3.5 Inverter Storage

- 1>Do not unpack the inverter and store it in a ventilation dry place .
- 2>Keep the storage temperature at -30°C-+60°C and humidity at 0-100%.
- 3>A maximum of four inverters with package can be stacked.
- 4>If the inverter has been long-term stored, inspections and tests should be conducted by qualified personnel before it is put into use.

	<p>After being stored for a month or longer, the inverter's time and date could be wrong, you need set the time and date before using, for more details please refer to Chapter 7.1 inverter commissioning.</p>
---	---

3.6 Grid Types

The 80-150KTL3-X LV/MV series, 80-133KTL3-X LV inverters connect to the grid like following drawing3.5,125- 8150KTL3-X MV inverters connect to the grid like following drawing3.6.

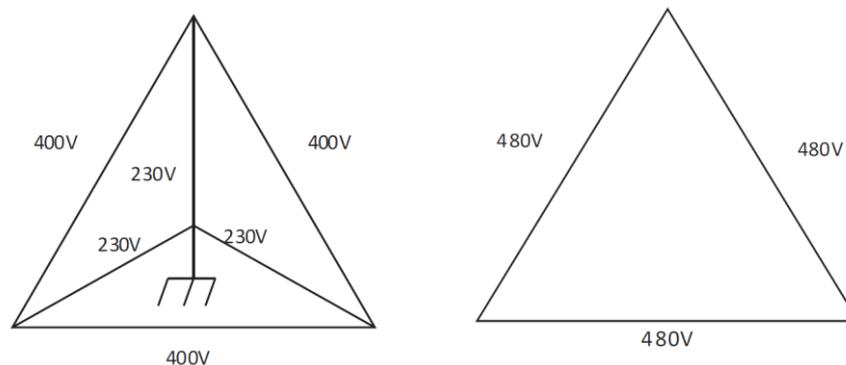


Fig 3.5

Fig 3.6

3.7 AFCI Detection Function

AFCI (Arc Fault Circuit Interrupter) is a kind of circuit protection device, the main function is to prevent the fire caused by fault arc. The electrical insulation aging, breakage, loose connection, air breakdown caused by air humidity and so on, all of these may cause an electric spark, which is called arc.

The AFCI function of the MAX series inverter is optional, and the detection equipment is assembled inside the inverter. When an arc-drawing condition is detected on the PV input side, the arc current could be detected by the CT assembled on the PV input-side wire. Then the inverter will shut down. Meanwhile, the inverter will display the corresponding fault message and the buzzer will sound, which could help to avoid harm and economic loss to the user.

NOTE: AFCI function is optional.

3.8 Anti-PID Function

The full name of PID is Potential Induced Degradation. Since the PID effect, a large amount of charge could accumulate on the surface of the photovoltaic module, which makes the surface passivation of the module worse. Eventually, the fill factor, open circuit voltage, and short-circuit current of the module are reduced, and the power of the photovoltaic module is attenuated.

The Anti-PID function uses the principle of reversible PID changes. MAX series inverters rectify AC voltage at night and boost it to generate a DC voltage. The DC voltage is connected to PV + and the ground respectively. When add a positive bias voltage to the module to make the PID effect reverse, the Anti-PID function could repair the photovoltaic modules at night and prolong the service life of photovoltaic modules.

NOTE: Anti-PID function is optional.

4 Unpacking

Checking before installation

- 1> Before unpacking the inverter, check the outer packing materials for damage.
- 2> After unpacking the inverter, check that the contents are intact and complete. If any damage is found or any component is missing, contact your supplier.

Package contents:

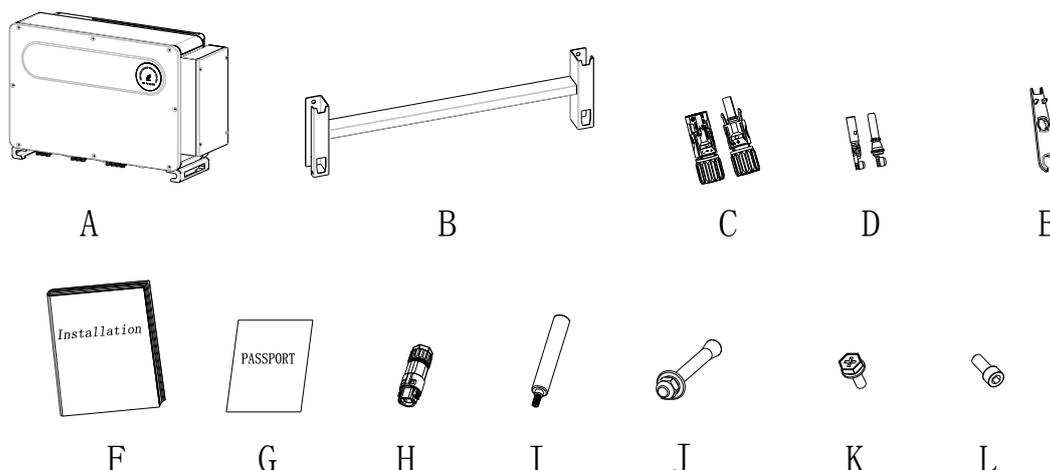


Fig 4.1

Mark	Descriptions	Number
A	Inverter	1
B	Wall mount	1
C	PV + terminal, PV- terminal	14/14(7 MPPT) 20/20(10MPPT)
D	PV terminal metal core	14/14(7 MPPT) 20/20(10MPPT)
E	Removal tool of PV terminals	1
F	Installation manual	1
G	Warranty card	1
H	Rs485 terminal	1
I	Removal handle(opt)	2
J	Wall mount screw	5
K	Ground screw	2
L	Security screw	1

5. Installation

 CAUTION	<ul style="list-style-type: none"> •To prevent device damage and personal injury, keep balance when moving the inverter because it is heavy. •Do not place the inverter with its wiring and signal terminals at the bottom contacting with floor or any other object because the terminals are not designed to support the weight of inverter. •When placing inverter on the floor, put foam or paper
---	--

	under the inverter to protect its cover.
--	--

5.1 Basic Installation Requirements

- A. Ensure that the installation wall is solid enough to bear the inverter(Inverter weight please refer to installation manual Chapter3, 3.2).
- B. There must be enough installation space to fit the size of inverter.
- C. Do not install inverter on flammable or heat-intolerant buildings.
- D. This inverter is IP66 protection, you can install it indoor or outdoor.
- E. To avoid inverter performance de-rate due to the over heat, please do not expose the inverter under direct sunlight.
- F. The installation humidity should be from 0-100%.
- G. The surrounding temperature of inverter should be from -30°C-+60°C.
- H. Inverter should be installed in a vertically or rear tilted surface, please refer to following drawings.

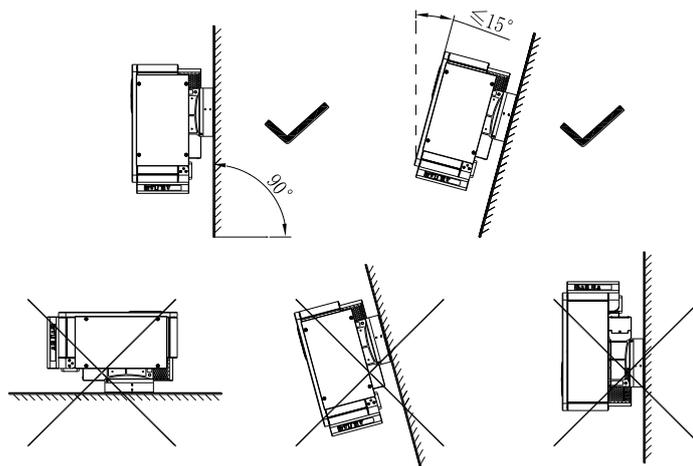


Fig 5.1

- I. To ensure the inverter can work smoothly and easy for personnel to operate, please notice there is sufficient space for inverter, refer to following drawing.

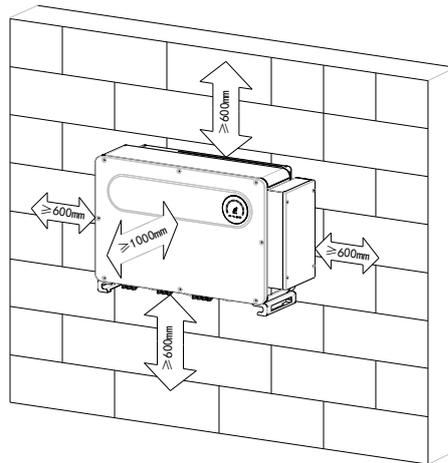


Fig 5.2

- J. Do not install inverter close to strong electromagnetic signal.
- K. Install the inverter out of children's reach.

5.2 Installation Environment Requirements

A. Although the inverter's protection level is IP 66, to extent inverter lifespan you still need to avoid rain and snow, please refer to following drawings.

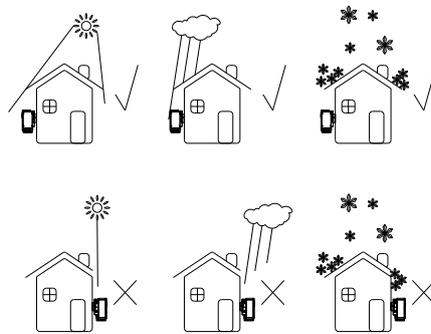


Fig 5.3

B. To reduce the de-rate performance of the inverter and extend inverter's life span, we strongly recommend you install an awning, for the distance between an awning and inverter, please refer to following drawing.

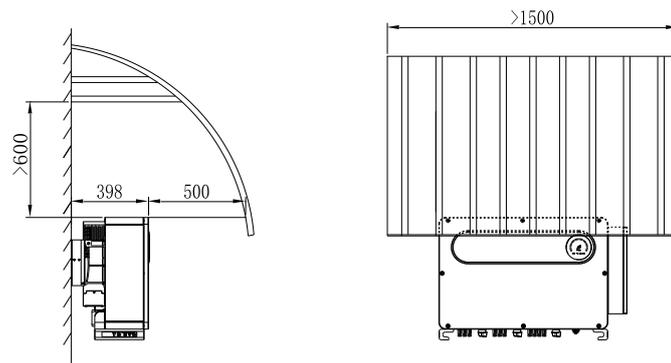


Fig 5.4

C. When you install multiple inverters on one surface, inverters should be installed as following drawing.

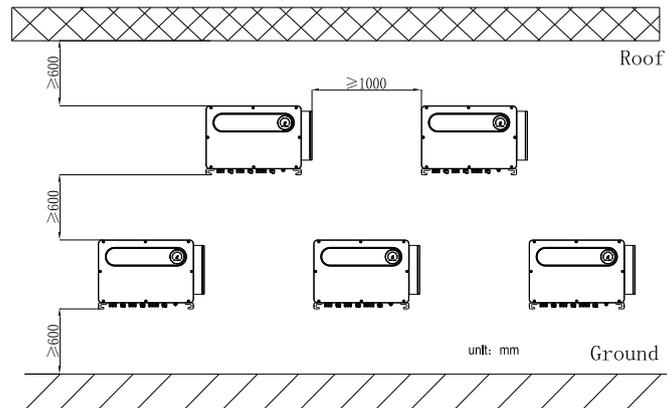


Fig 5.5

D. Do not install inverter into an enclosed space like following drawing.

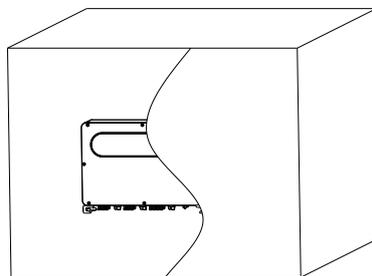


Fig 5.6

5.3 Moving Requirements

	<ul style="list-style-type: none"> •The inverter is heavy, please move it with care and keep balance to avoid personnel injury. •Do not place the inverter with its wiring and signal terminals at the bottom contacting with floor or any other object because the terminals are not designed to support the weight of inverter.
---	---

Plan 1 :

1>As shown in Fig5.7, use a rope to tie at ring and handle, lift the inverter from package and move to installation position.

2>When you are moving the inverter, please keep the balance.

Notice: There is front and bottom mark on the package.

Plan 2(Optional):

1> As shown in Fig5.8, 4-6 persons lift the inverter out of package swap the ring to moving handles.

2>When you are moving the inverter, please keep the balance.

Notice: There will be front and bottom mark on the package.

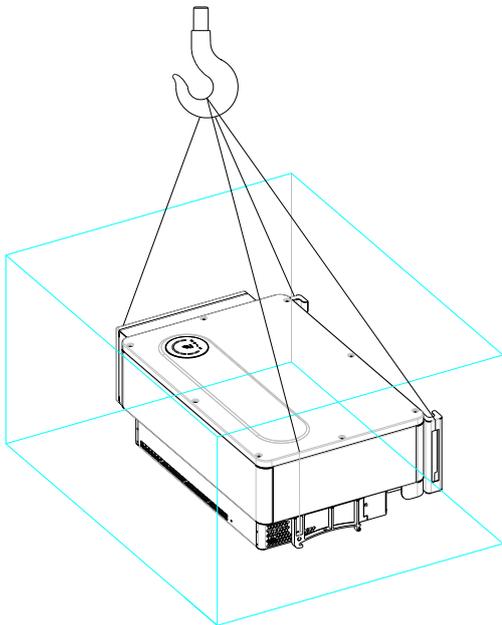


Fig 5.7

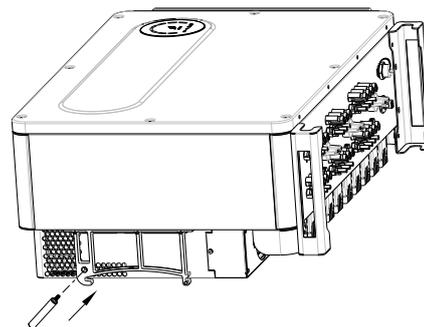


Fig 5.8

5.4 Wall Mount Bracket Installation

Before install the inverter you need install the wall mount bracket so that the inverter can be firmly installed on the wall.

Wall mount plan:

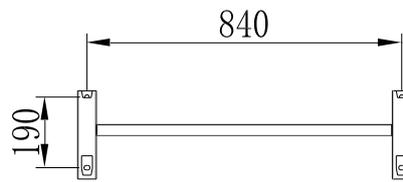


Fig 5.9

1>Use the wall mount plate as a template drill holes on the wall and put in expansion bolts.

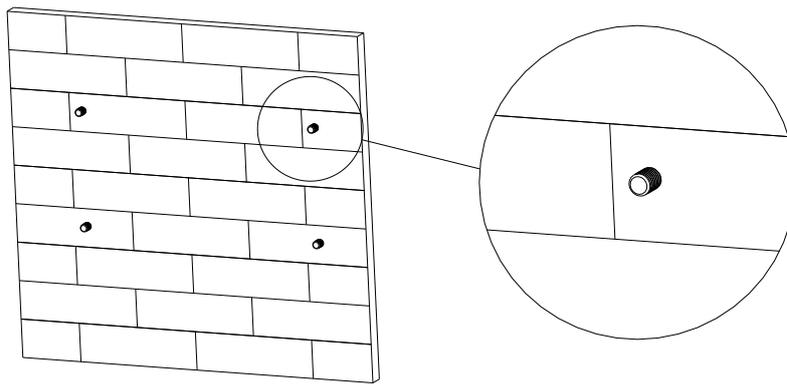


Fig 5.10

Notice : Expansion bolt should be installed on solid walls with at least 100mm thickness.

2>Follow the following drawing put the bolt to install the wall mount plate on the wall.

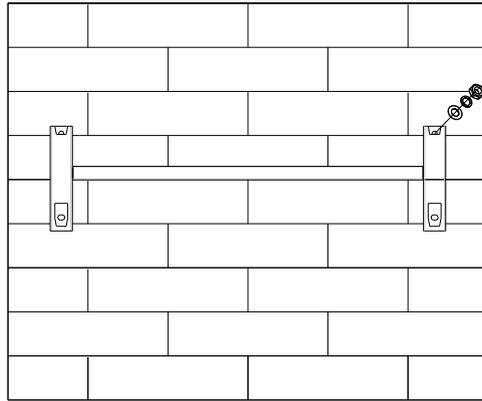


Fig 5.11

Notice: Do not install inverter unless you have confirmed the wall mount plate has been firmly installed on the wall.

5.5 Installing The Inverter

After the wall mount bracket has been firmly installed on the wall , put the inverter on that plate.

- 1>Use the rope(must meet the weight requirement of the inverter) through two rings and lift the inverter up, just as following Figure.
- 2>Before hanging the inverter on the wall mount bracket use screws to fix the inverter and please keep the inverter balance.
- 3>Check the inverter if it is firm enough and lock all the screws.

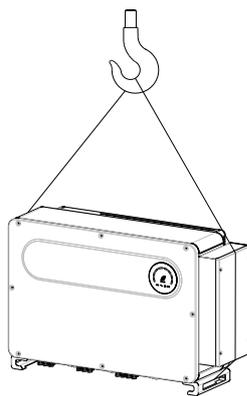


Fig 5.12

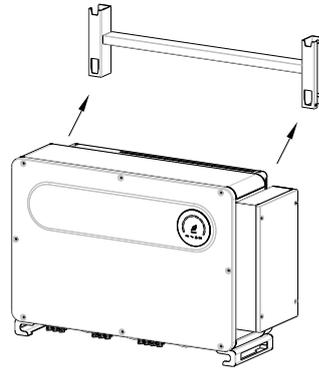


Fig 5.13

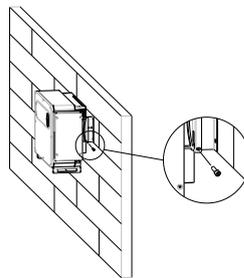


Fig 5.14

6. Connecting Cable

6.1 Connection on AC side

 <p>DANGER</p>	<ul style="list-style-type: none">•Before electrical connection, please ensure the inverter DC switch is at "OFF" also disconnect AC switch, otherwise the high voltage from inverter may cause life risk.•Only trained authorized electrical technician can do the electric connection also please follow the connection procedures in this manual along with local country's regulations.•High voltage may cause electric shocks and serious injury please do not touch the inverter.•Please do not store inverter in area with flammable and explosive material.
---	--

 WARNING	<ul style="list-style-type: none"> •Each inverter must install one AC breaker AC breaker is forbidden to share with other inverters. •It is forbidden to add load between inverter and breaker.
---	---

Preparation before connection:

1>Disconnect inverter DC switch and AC breaker or switch.

2>When you lock the AC cable's screw, the torque force should be 100kgf·cm.

When you lock the cover screw, the torque force should be 35kgf·cm.

3>Measure the grid voltage and frequency, please refer to chapter 10.

AC breaker specification :

Inverter model	Breaker model
MAX 80KTL3-X LV	160A/400Vac
MAX 100KTL3-X LV	200A/400Vac
MAX 110KTL3-X LV	200A/400Vac
MAX 120KTL3-X LV	200A/400Vac
MAX 125KTL3-X LV	250A/400Vac
MAX 133KTL3-X LV	250A/400Vac
MAX 125KTL3-X MV	200A/500Vac
MAX 136KTL3-X MV	200A/500Vac
MAX 150KTL3-X MV	200A/500Vac

AC wire specification :

Inverter Model	Copper wire crossectional area(mm ²)	Copper wire recommendation(mm ²)	Aluminum wire recommendation(mm ²)
MAX 80KTL3-X LV	70-240	70	95
MAX 100KTL3-X LV	70-240	70	95
MAX 110KTL3-X LV	70-240	70	95
MAX 120KTL3-X LV	70-240	70	95
MAX 125KTL3-X LV	70-240	70	95
MAX 133KTL3-X LV	70-240	70	95
MAX 125KTL3-X MV	70-240	70	95
MAX 136KTL3-X MV	70-240	70	95

MAX 150KTL3-X MV	70-240	70	95
---------------------	--------	----	----

Notice: The cable must be unbroken.

If you connect the aluminum wire, please consult our technology.

AC side connection steps:

 WARNING	<ul style="list-style-type: none"> •If the cable is thick, after tightening the cable do not shake it and ensure the cable is well-connected and then start the inverter. Loose connection may cause overheat.
---	---

1>Following drawing shows inverter's AC terminal, L1, L2, L3 are three live lines, N is Neutral line.

Notice: The screw is M8 screw.

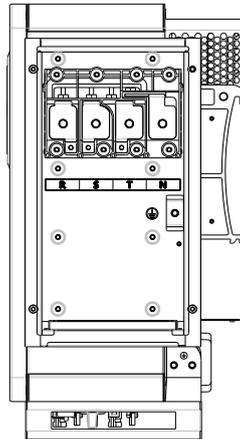


Fig 6.1

2> Firstly, unscrew the waterproof cover, then put the cable through the cover, pile the cable base on terminal size(17mm recommended), use a wire stripper to connect cable. and terminal, tighten all the terminal screws.

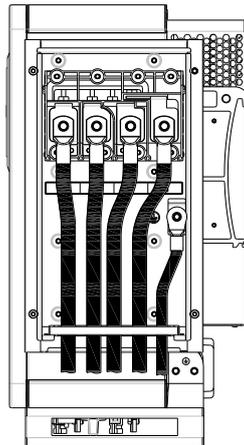


Fig 6.2

Diagram of how to install a terminal:



Fig 6.3

3>Put the water proof cover back to the inverter and fill the cover with fireproof mud, just as following drawing.

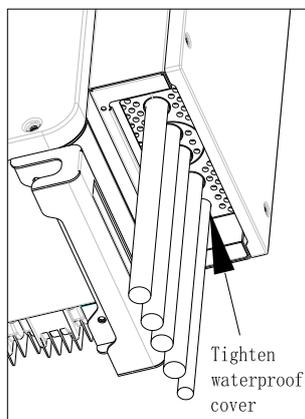


Fig 6.4

<p>WARNING</p>	<ul style="list-style-type: none"> •Must tighten the waterproof cover, otherwise there will be a risk of water leakage.
----------------	--

6.2 Connection On DC Side

	<ul style="list-style-type: none"> •Before electrical connection please ensure the inverter DC switch is at "OFF" also disconnect AC switch, otherwise the high voltage from inverter may cause life risk. •Only trained authorized electrical technician can do the electric connection also please follow the connection procedures in this manual along with local country's regulations. •High voltage may cause electric shocks and serious injury please do not touch the inverter. •Do not place flammable or explosive materials around the inverter.
---	---

Notice: The sunlight will generate voltage on the solar panels, after serial connection, the high voltage may injure personnel, so before connect DC input cable you need cover solar panels with light-tight materials and make sure the inverter DC switch is at "OFF" status, otherwise high voltage may injure personnel.

	<ul style="list-style-type: none"> •Each string's maximum open circuit voltage cannot exceed 1100Vdc, otherwise it could lead to fire or damage the inverter. If the inverter was damaged by higher maximum open circuit voltage (higher than 1100Vdc) product warranty will be forfeited and Growatt will not take any responsibility. •The inverter shall be used with IEC 61730 Class A rating PV module. •When the group is suspended, be sure to use dust plugs to block up to prevent entering the water into the dust.
---	--

- 1> Each string solar panels should be same brand and same model.
- 2> Under any circumstance, the maximum short circuit current should not exceed 32A.
- 3> The total panels power should not exceed 1.25 times of inverter input power.
- 4> To optimize system settings, recommend two strings with same amount solar panels.

Notice: Connectors need to be fit with male and female terminals, before connecting panels with inverter please make sure the positive pole and negative pole, namely the solar panels' positive pole connect to " + " negative pole connect to " - " .

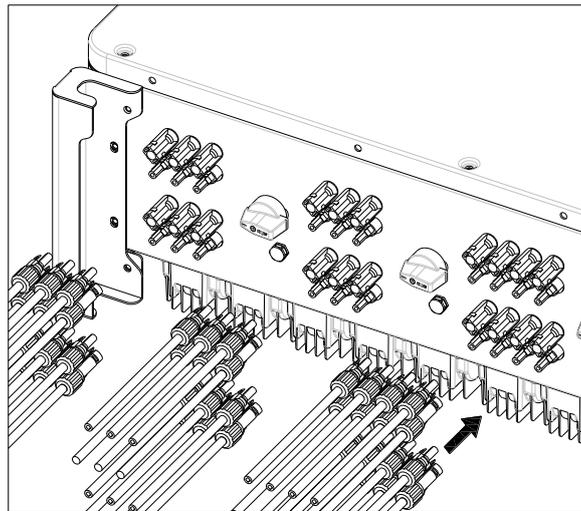


Fig 6.5

5>Decide the length of peeling base on cable terminal, use the wire stripper to connect cable and terminal, and separately connect to specific connector.

6>Connect the positive and negative poles to inverter terminals, different inverter's maximum single string input current please refer to following table.

Inverter model	Max. single string input current
MAX 80-150KTL3-X LV/MV	16A*2

7. Cable specifications:

Inverter model	Cross-sectional area (mm)	Recommendation (mm ²)	Cable outer diameter(mm)
MAX 80-150KTL3-X LV/MV	4-6	4	4.5-7.8

Notice : 1. Under any circumstance, the total current of all strings cannot exceed the inverter's maximum current.

- 2. Do not touch any working solar panels.
- 3. Make sure the cable is unbroken.

6.3 Connection Of Communication Cables

6.3.1 RS485 port

RS485 can be used for single inverter communication also can be used for multiple Inverters (Maximum 32 inverters) , the longest distance is 500 meters, high speed (Baud rate 38400) , the communication port as following.

485 can be used for single inverter communication also can be used for multiple

Inverters (Maximum 32 inverters) , the longest distance is 500 meters, high speed (Baud rate 38400) , the communication port as following.

It is recommended to use shielded twisted pair for RS485 cable When a single inverter communicates, the shielding layer of the RS485 cable needs to be connected to the ground and can be connected to the PE of the inverter case; When multiple inverters are connected in parallel, both RS485 interfaces must be used. The shield of the RS485 cable should be connected to the GND of the RS485 terminal, and then the GND of all inverters should be shorted together by wire. Finally, Connect the communication ground GND of the inverter that is last connected to the monitoring device to the protective ground of the inverter housing.

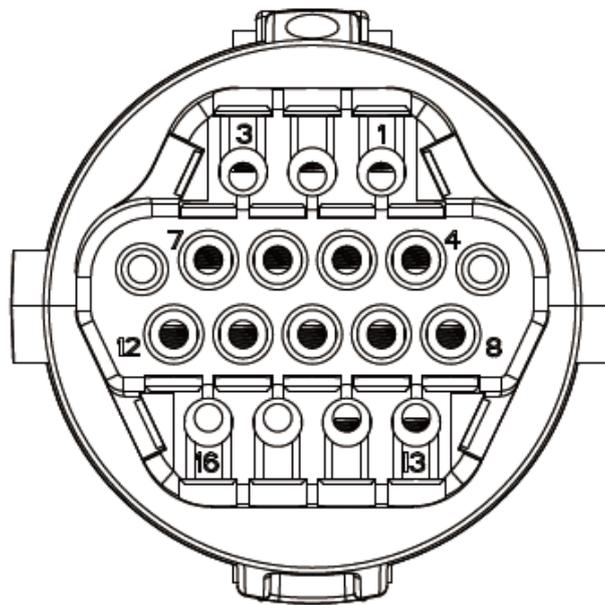


Fig 6.6A

Mark	Description	Mark	Description
1/2	485-1 PE Shield	9	DRM1/5
3	485-1 A1	10	DRM2/6
4	485-1 B1	11	DRM3/7
5	485-1 A1	12	DRM4/8

6	485-1 B1	13	REF/GEN
7	485-2 A1	14	NC
8	485-2 B1	15/16	485-1 Matching resistance

Notice: When multiple inverters are connected in parallel or the transmission distance is long, The reason for this is to increase the matching resistance.

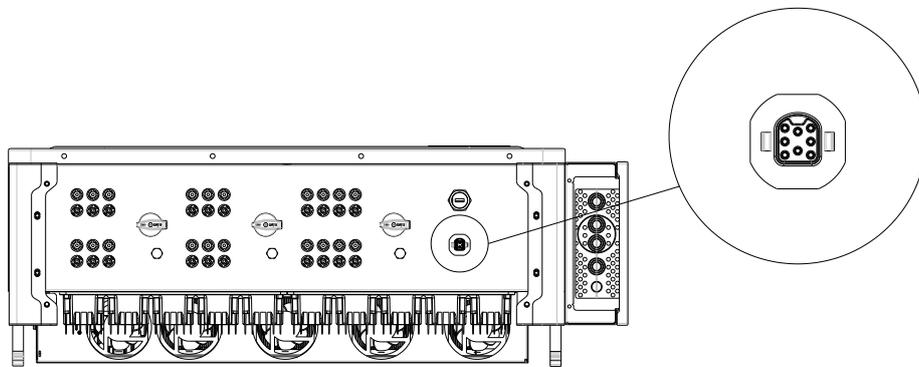


Fig 6.7

6.3.2 USB port

MAX 80-150KTL3-X LV/MV series inverter is configured with USB_A port ,can be connected to USB to WIFI module, Shine GPRS-X, Shine Wifi-X, Shine 4G-X, Shine Link-X, etc. The monitoring module is selected to implement the monitoring function. In addition, you can quickly update the software via a USB flash drive.

Steps to install the monitoring module:

- 1> Loose waterproof cover, and remove waterproof plug.
- 2> As shown in Figure 6.8A,plug the USB to WIFI dongle to USB_A port, the indicating LED will lit up.
- 3> As shown in Figure 6.8B, make sure that Δ is on the front side, plug the monitoring module to USB_A port, and tighten the screws.

Note: When the operator leaves please take the monitoring module and data cable away, and tighten the waterproof cover to avoid water entering the interface.

6.4 Connecting The Ground Cables

In this solar system all the unloaded metal components and cases should be connected to the ground.

Single inverter need grounding over a PE point, multiple inverters need connect all the inverter PE cable and solar panels shelves to the same grounding point to achieve equipotential.

The grounding steps as following:

Take out the ground screw at the inverter bottom, connect the ground cables as following figure.

Notice: 1.The machine is safely separated from the lightning protection and the distance is as far as possible.

2.Do not expose Grounding terminal in the air and precaution for the rain.

3.When you lock the case ground screw, the torque force should be 60kgf·cm.

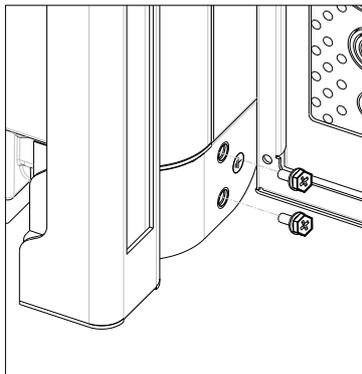


Fig 6.9

According to the relevant provisions of IEC 61643-32 "Connecting to photovoltaic devices surge protectors - selection and use of guidelines", whether for household or outdoor photovoltaic power plants, it is necessary to ensure the implementation of lightning protection measures for photovoltaic systems:

 WARNING	<p>The lightning protection measures for photovoltaic systems shall be carried out in accordance with the corresponding national standards and IEC standards. Otherwise, photovoltaic devices such as components, inverters and power distribution facilities may be damaged by lightning. In this case, the company does not carry out warranty and assumes any responsibility.</p>
---	--

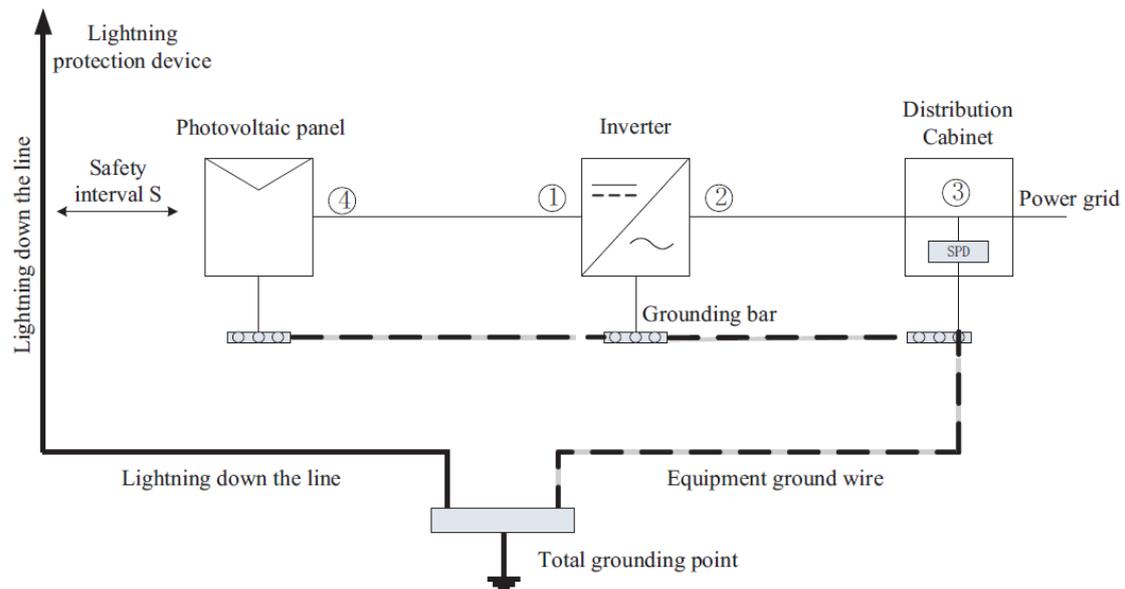


Fig 6.10

- 1) It is generally recommended to install lightning protection devices (such as lightning rods / lightning protection belts and down conductors) to prevent lightning from hitting the PV array.
- 2) Lightning protection devices and down-conductors and related equipment in photovoltaic systems (including photovoltaic panels, inverters, cables, power distribution equipment) should maintain a safe separation distance S .
 - A. When the safety distance S is satisfied The position ①③ of the figure should be equipped with a lightning protection module. In general, it is recommended to install Type II in position ① and Type I in position ③.
 - B. When the safety and safety distance S is not met:
In addition to position 3, Type I lightning protection module should be installed in Figure①②④.
- 3) The lightning down conductor and the equipment ground wire eventually sink at a total ground point, but the two cannot share the wire. That is, the equipment grounding wire should be pulled separately, and the wire diameter requirement $>6\text{mm}^2$ when the safety interval distance S is satisfied.
- 4) About the above lightning protection lightning receptor system related design reference GB/T 21714.3-2015 Suggested value of S : According to the general 5 storey height (about 15m) building roof, S takes 2.5m enough, this distance can be simplified according to the inverse relationship of the floor height.

7. Commissioning

7.1 Commission The Inverter



•If the inverter is stored over one month, its default time and date may look wrong, the time and date should be reset before connection to the grid.

7.1.1 Set inverter address

After inverter is started normally, inverter address can be set via RS485/USB converting to WIFI. When multiple inverters are connected in parallel via RS485, the inverter must be set to a different communication address. When a single inverter communicates, the default communication address can be used.

Note: The default communication address of the inverter is 1, which can be set to 1-254.

7.1.1.1 Set RS485 address with Shinebus

The 485 address of the inverter can be modified by Shinebus, This operation is performed by a professional.

7.1.1.2 Set RS485 address on ShinePhone APP

Refer to 8.2 download mobile APP ShinePhone and connect to inverter WIFI to enter local monitoring page, this operation is performed by a professional.

1>Click "Parameters"

2>Enter password.(When you use it for the first time, you need to set the password first. Click "Reset password" to enter the OSS account number and password. The distributor and installer can apply for the OSS account from Growatt. Click "Sign in" to set the password. After the setting is successful, you can start using it.)


3>Click top item "COM Address" ;

4>Click the "Read" button in the upper right corner to read the current

communication address of the inverter;

5> Set inverter com address;


6> Read inverter com address to ensure setting is successful;

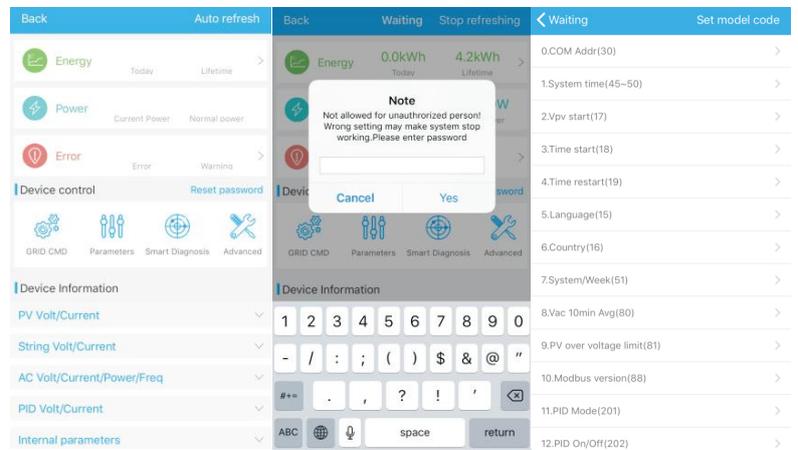

7.1.2 Set inverter time and date

Method 1:

Please refer to section 8.2.1 and login ShinePhone APP. Click "system time(45-50)" to set inverter time and date on the parameter setting page.

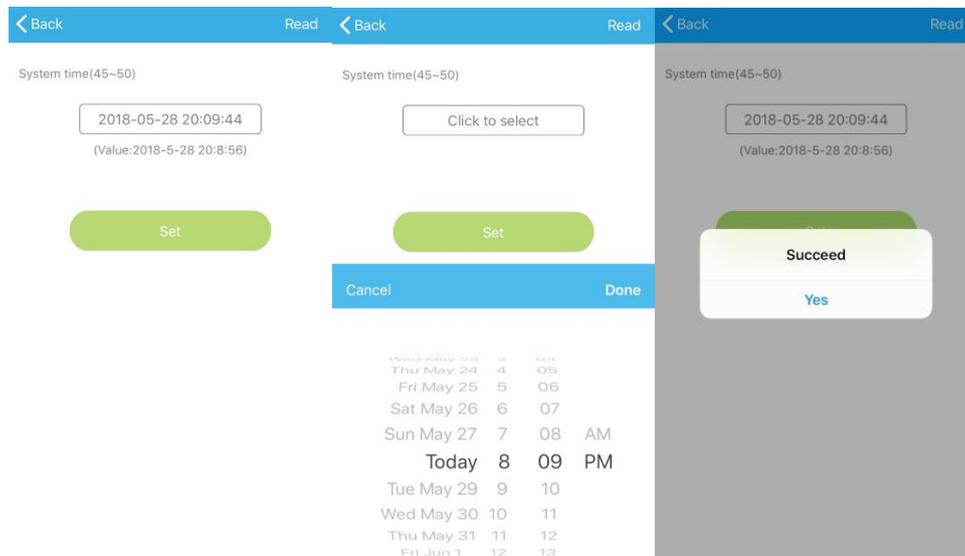

Method 2:

Please connect GPRS antenna to the inverter as section 6.3.3, when the inverter is powered on, connect the inverter to the server as section 8.1.2, then the inverter time will be updated automatically.

7.2 Operation Mode

7.2.1 Waiting mode

When the DC voltage is more than 180Vdc, inverter will be powered on and enters the "waiting" state.

At this mode, inverter will check the system parameter. If the system is normal and PV voltage is more than 195Vdc, inverter will try to connect to the grid.

7.2.2 Working mode

At this mode, inverter work normally, and the Power or fault code indicator light shows the power delivered by the inverter to the grid.

When the DC voltage is more than 180Vdc, inverter converts the DC power generated

by the PV modules into AC power and supplies them to the grid.
 When the DC voltage is lower than 180Vdc, inverter will enter into “waiting” state and try to connect to the grid, at this status, inverter consume very small power to check the internal system status.

Note: only when the PV modules supply enough power(voltage > 195Vdc) then the inverter will start automatically.

7.2.3 Fault mode

Inverter intelligent control system will continuously monitor and adjust system status. When there is a fault detected, LED will show the fault message.

Note: Please refer to section 8.2 to check the fault message and take corrective measures.

7.2.4 Off mode

When the sunlight is weak or no light, inverter will stop working automatically. When it is off, inverter will not consume grid power or PV module. At the same time, the LED of inverter will be turned off.

Note: When PV string DC voltage is too low($\leq 150Vdc$), inverter will be off.

7.3 LED Display

Inverter current operation status can be visually checked from LED display directly.

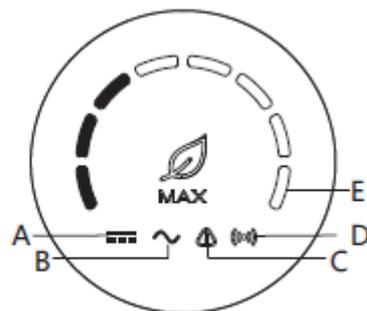


图 7.3

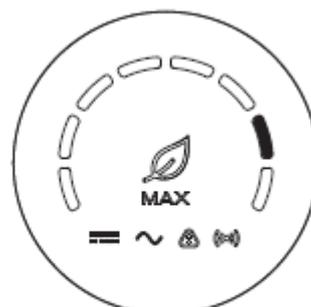


图 7.4

Description of LED status			
Position of LED	Type of LED	Inverter status	LED status

A	PV voltage indicator light	PV voltage reaches grid voltage	Green light is on
		PV voltage does not reach the grid voltage	Light is not on
B	AC voltage indicator light	Inverter is in the grid state	Green light is on
		No AC voltage	Light is not on
		With AC voltage, inverter is in the grid countdown state	The green light flashes slowly, and the alarm or fault indicator light is not on
C	Alarm or fault indicator light	Inverter works normally	Light is not on
		Inverter is in alarm state	Red light flashes slowly
		Inverter is in fault state	Red light is on
D	Communication indicator light	Inverter has external communication, such as RS485, GPRS, etc.	Green light is on
		Inverter has no external communication	Light is not on
		Inverter upgrade or USB interface is reading and writing data	Green light flashes
E	Power or fault code indicator light	Inverter is in the grid state	The eight LEDs from left to right represent the power of the inverter: if 8 green lights are on, it represents 100% of the inverter power. As shown in Figure 7.3, it represents 37.5% of the inverter power, and so on.
		Inverter is in fault state	The five LEDs from right to left represent 1, 2, 4, 8, 16 in turn, representing the fault code of the inverter. As shown in Figure 7.4, the LED status represents 2, and then 2 is added to the specific 99 to get 101, so it can be known that the

			inverter reported error 101.
--	--	--	------------------------------

8 Remote Data Monitoring

8.1 Remote Data Monitoring

MAX 80-150KTL3-X LV/MV series inverter remote monitoring ways include APP (ShinePhone) and server Web page, RS485,GPRS,4G,PLC(reserved) can satisfy both ways of monitoring.

8.1.1 Mobile phone APP(ShinePhone) remote monitoring

1>Scan the following QR code, or download from Android store or App store by searching "Shinephone" , download and install software.




Note: 1.Make you it's the latest version.

2.Please find more details on <http://server.growatt.com>.


2>Users can register their mobile APP account by following the steps below: Run ShinePhone go to login page click register" .Registration is required to fill in the information, with the * is required, the agreement is mandatory, you can log in to the main interface of ShinePhone after registration, the registration page and the main interface are as shown below.

Shinephone login and main page:

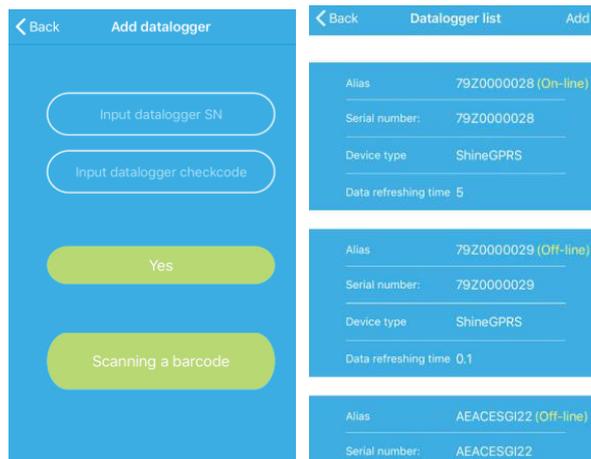

Device page:

- 1> Main page top middle is the name of current plant, user can click the "v" button to switch to other plants under this account.
- 2> User can add datalogger, check datalogger and add plant by click "+" button at the top right corner.
- 3> Top half shows current plant power, revenue today and total production.
- 4> My device list shows current plant device, user can see more details by click the device, left cross the device to stick the device and edit, edit operation includes change device alias, icon, and delete device.

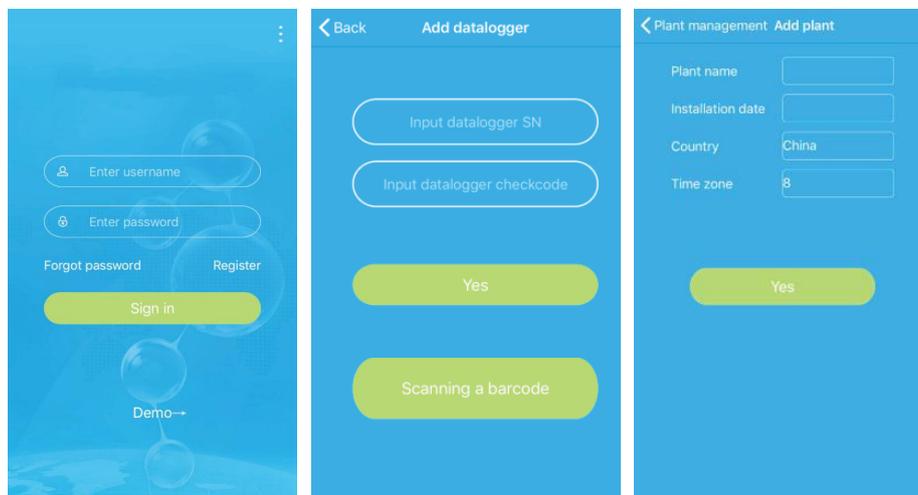

Datalogger:

- 1> User can add more datalogger under the particular plant.
- Way: Click "+" in the upper right corner of the device page and select "Add Collector (WiFi/GPRS, etc.)", as shown in Figure 8.7.
- Note: You can choose to manually enter the collector serial number for addition, or you can add it by scanning the barcode on the nameplate.

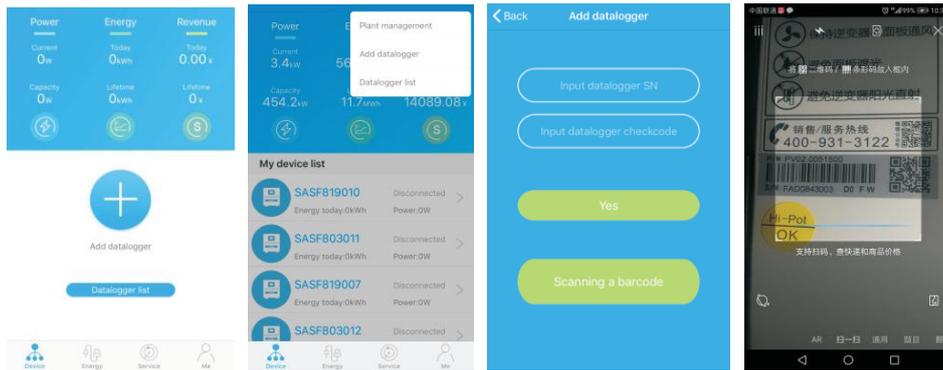


图 8.7

2>User can add datalogger at the datalogger list page to add a datalogger, edit, delete, configure etc.

3>User can add more plants with the add Plant function.

Device page and function:

1>Device page: User can click the device to see more details, the device page show current power and Energy today and daily power chart, user can find more with control, parameter, data and Events page.


2>Control: user set inverter on/off, set active power, set reactive power, set PF, set inverter time, set grid voltage high, set grid voltage low. The operation password is : inverter+ date, for example inverter20170722.

3>Parameter: user can see device SN, rated power, firmware version, PV1 voltage, current, and power etc.



4>Data page: user can see the PV power, voltage, current, R phase power, S phase power, S phase power, T phase power, output power by day, month, year, by finger up cross the screen.

5>Events: User can see the fault message if there it is.

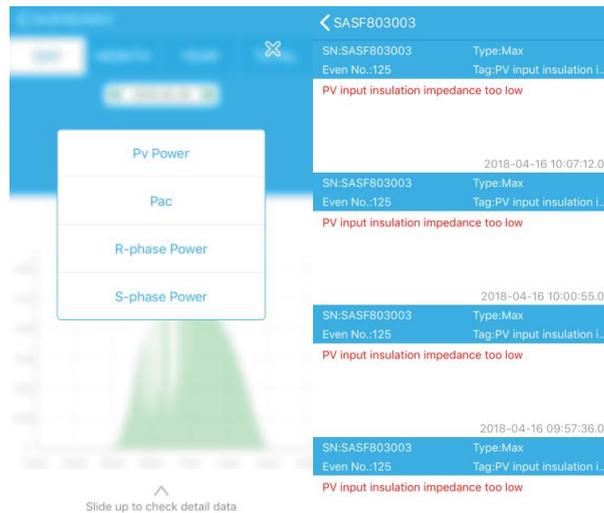

8.2 Local Data Monitoring


MAX 80-150KTL3-X LV/MV Series Inverter local data monitoring mode has a mobile phone app (Shinephone) and PC direct connection, details are as follows.

8.2.1 Mobile phone app (Shinephone) Local Monitoring

8.2.1.1 Log on to app for local monitoring


Method 1

When you open the app login front page, click the top right corner toolbox icon. Pop up the toolbox, click the local debugging tool, and you can get the wifi name of the collector by scanning the QR code or barcode (The default password for WIFI is 12345678. If you have already connected, you can click "Skip" to connect directly to the WIFI.)

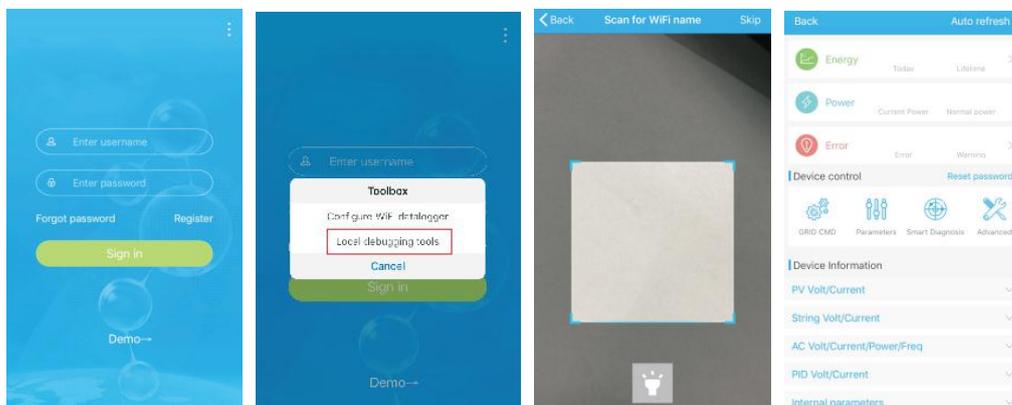

Method 2

Open app enter user name and password click login, enter me (personal center). Click the enter tool, find the local debugger to enter, and you can get the wifi name of the collector by scanning the QR code or barcode(The default password for WIFI is 12345678. If you have already connected, you can click "Skip" to connect directly to the WIFI.)

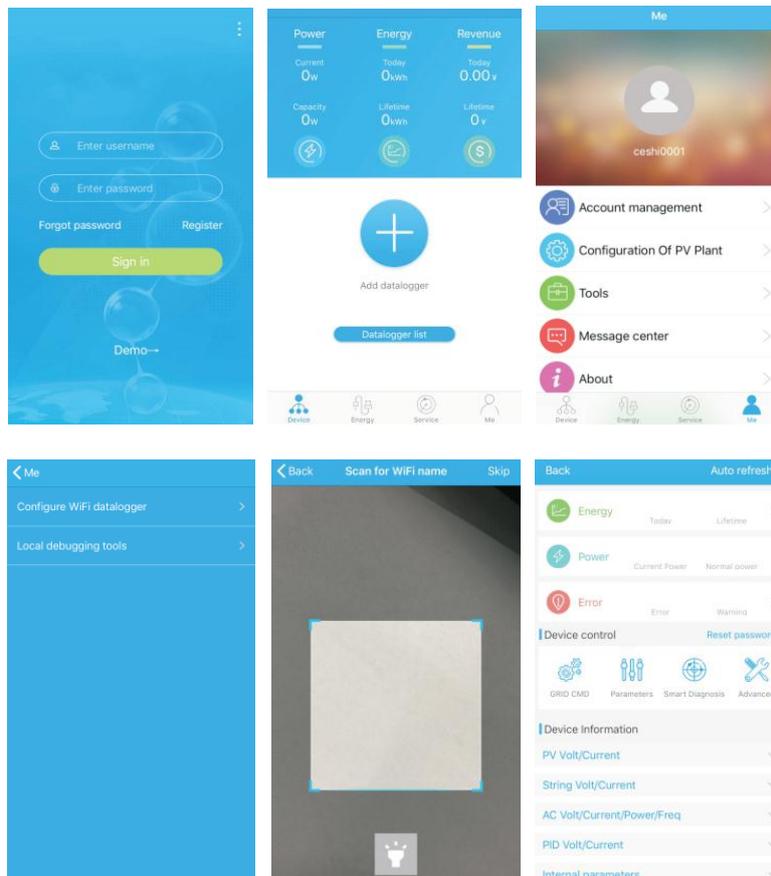

8.2.1.2 Use of local monitoring and debugging

When viewing local monitoring, you must keep the phone's wifi connected to the collector's wifi to view local monitoring (to enter the local monitoring page, first click auto refresh to get the latest data information). Electricity generation: the option to view the latest generation, daily generation, monthly and annual generation of detailed information;

Power: you can see the current power and rated power value; failure: can read the equipment detailed fault information.

Note: In addition to resetting the password to connect to the network, other WIFI


modules that must connect to the collector can view information.

A. Reset password

Need network connection login oss account to set up or modify the local debug password.

B. Setting configuration

The configuration data of inverter, voltage, power and so on can be modified according to the usage (Fig 8.36).

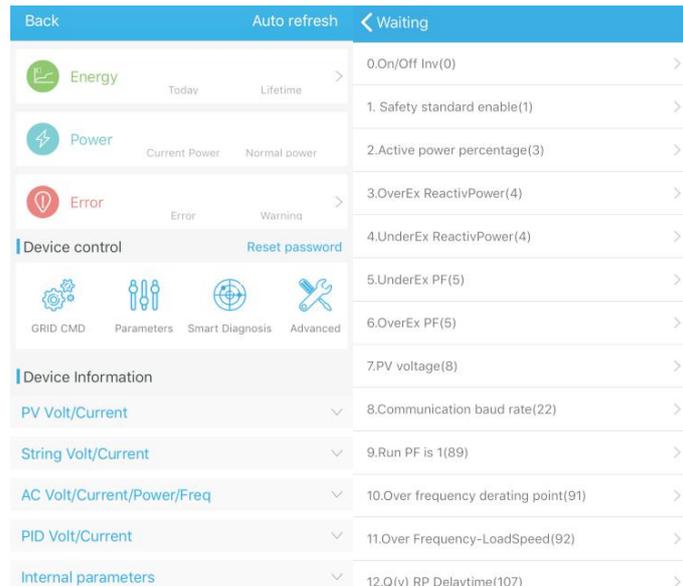



C. Parameter configuration

The parameter data of the equipment can be modified according to the usage (Fig 8.37).


D. Intelligent detection

Detailed and accurate view of the device's detailed data and status (Fig 8.38)

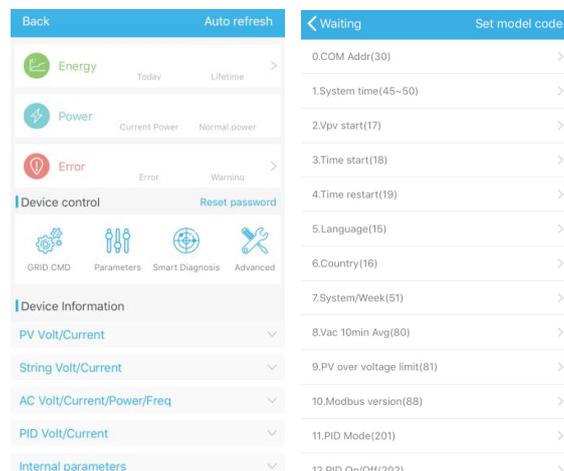


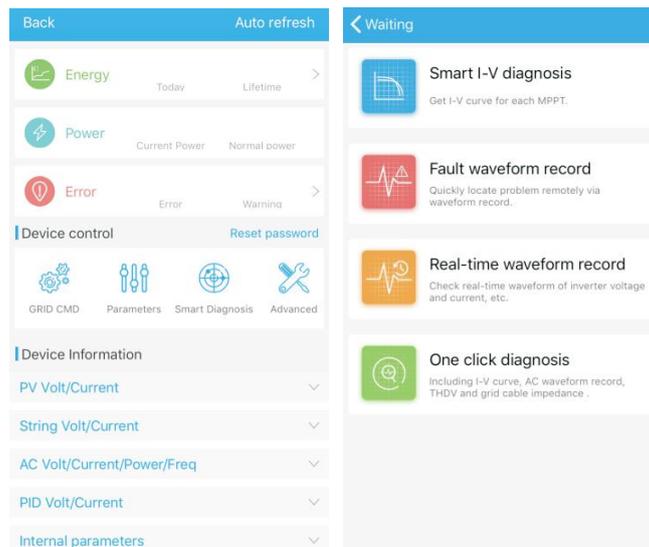


E. Intelligent I-V curve scanning
Can remotely scan each mppt (Fig 8.39).

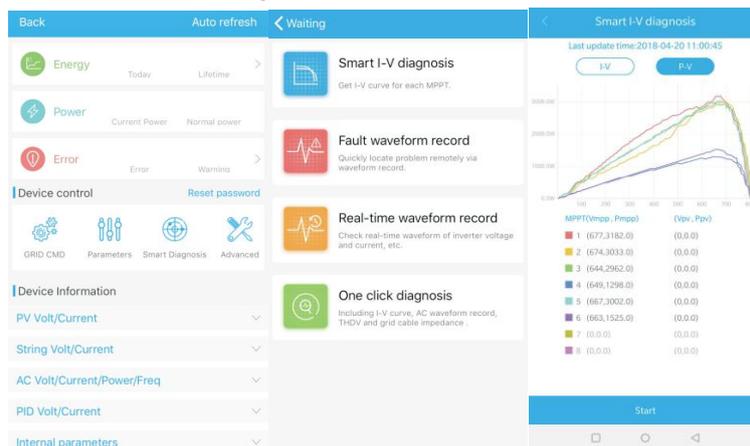

F. Fault recording detection
Remote, fast and accurate fault location (Fig 8.40).

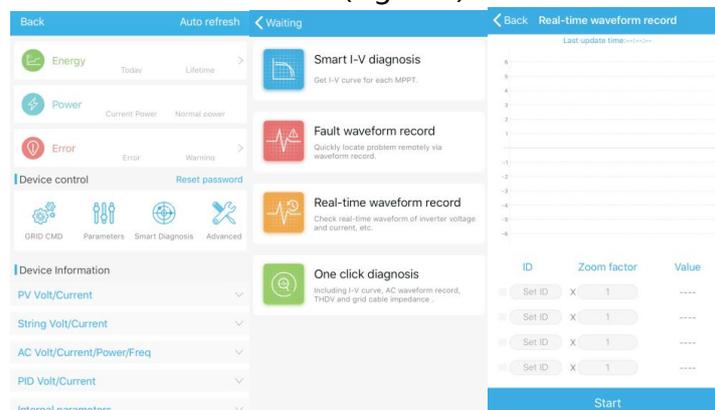

G. Real-time recording detection
Inverter voltage and current quality can be observed in real time (Fig 8.41).

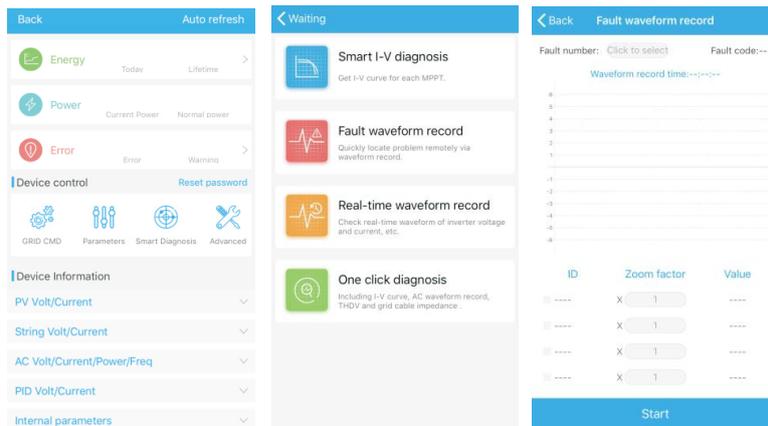

H. One click diagnosis



I-V curve diagnosis, grid waveform, THDV and cable impedance detection all at one click (Fig 8.42).

I High level setting

According to the register address set parameters (professionals).

J. Device information

Check PV voltage/current, string voltage/current, AC voltage /current /power/ frequency, PID voltage/current, internal voltage parameters and device detail information and parameters(Fig 8.43).

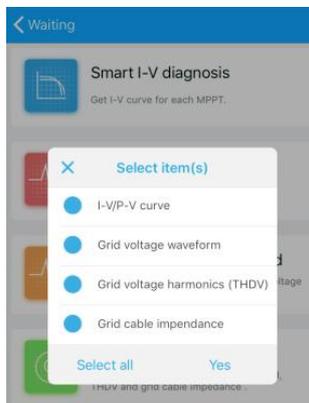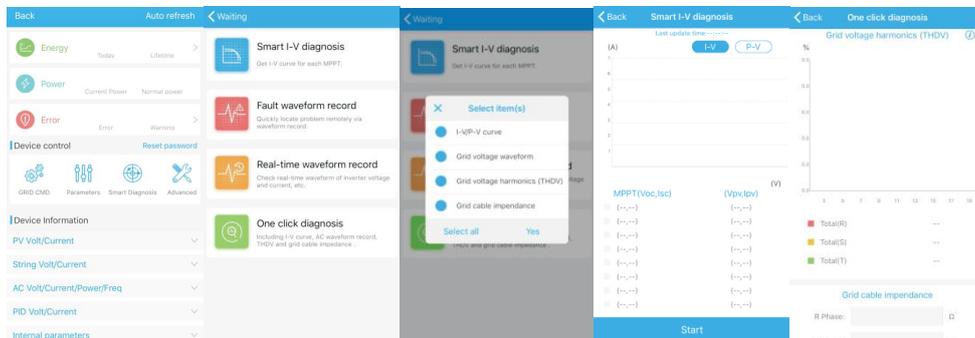


8.2.2 U Disk Monitoring

Refer to 6.3.2 USB to WIFI/ U disk communicate connection, the local monitoring of U disk can realize the functions of software burning, fault recording, curve analysis and real time recording. Details are as follows:


1>Firmware Programming

Create the bconfig.txt file under the root of the U disk, write to the following content, then insert the U disk to programming. Note the M3 program needs to be programming at last time.

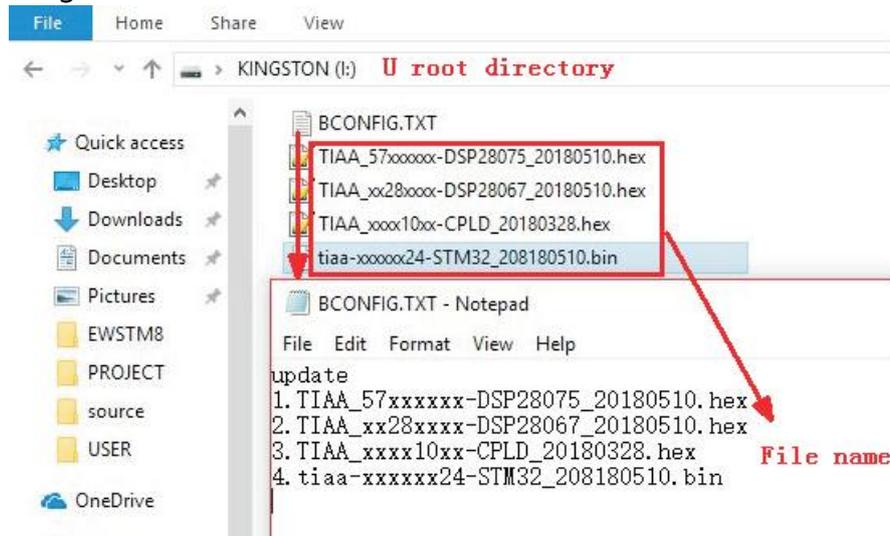

2>Fault Recording


Create the bconfig.txt file under the root of the U disk, write the following content, then insert the U disk that can be read fault information, then generates a form under the files in the root directory, A total of 60 fault recording information is stored, the latest Numbers is 0.

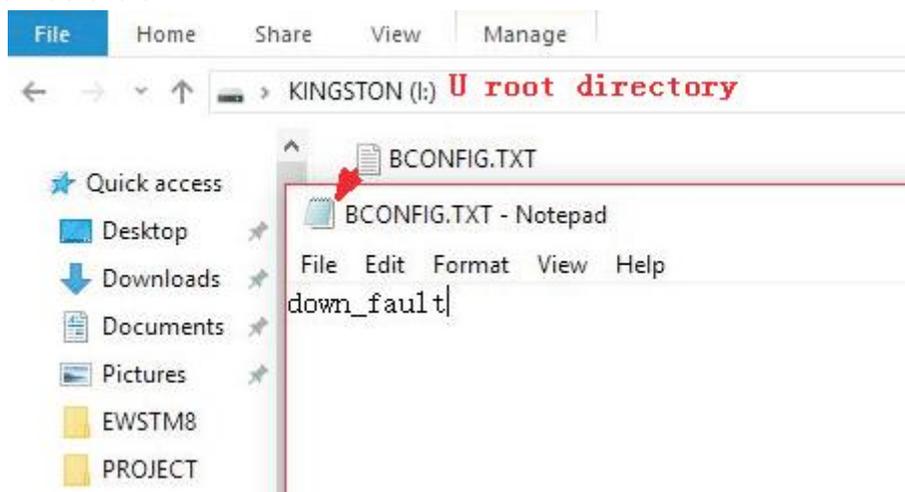

3>Curve Analysis


Create the bconfig.txt file under the root of the U disk, write the following content,

the insert U disk to record I-V curve, then generates a form under the files in the root directory.

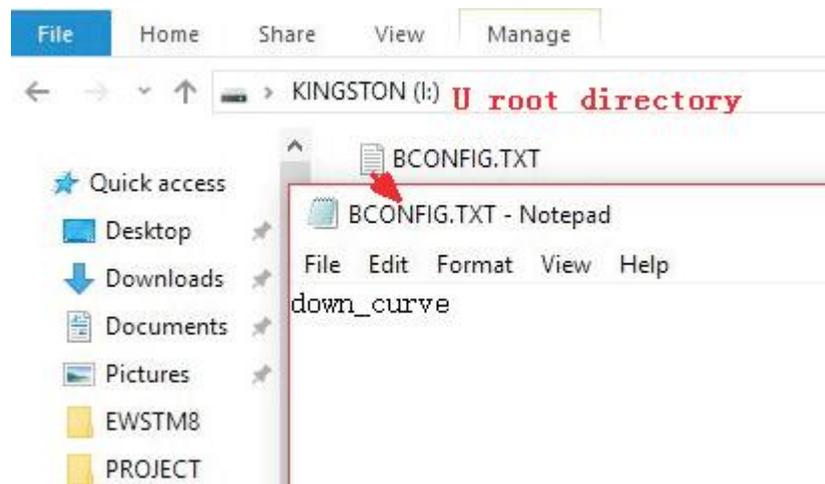

4>Real Time Recording

Create the bconfig.txt file under the root of the U disk, write the following content, then insert U disk to read real time recording information , then generates a form under the files in the root directory ,the form record's waveform is consistent with the ID of the command setting.

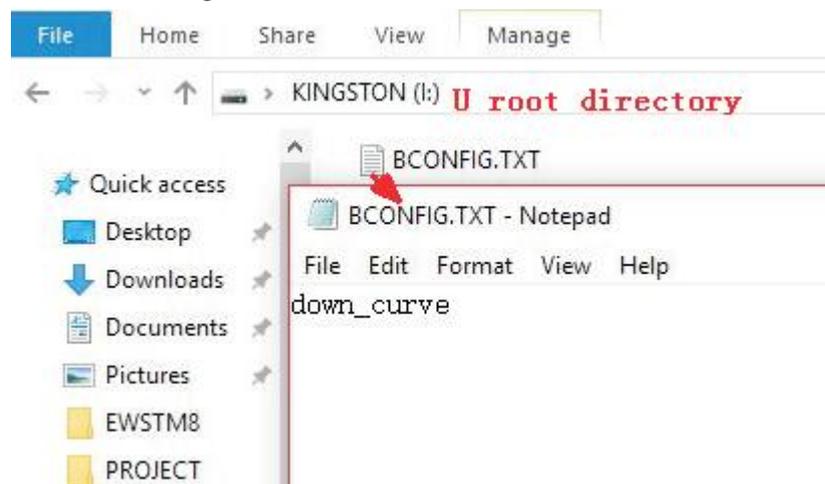

9. System Maintenance

9.1 Routine Maintenance

9.1.1 Cleaning Inverter

	<ul style="list-style-type: none"> •Before any operation, please disconnect the DC switch and AC switch, and wait for at least 5 minutes until internal capacitance discharge completely.
---	--

1>Check the ambient temperature and dust of the inverter, clean the inverter when necessary.

2>Observe whether the air outlets is normal, when necessary, clean the air outlets or clean the fan step by step, steps refer to 9.1.2.

9.1.2 Fan Maintenance

	<ul style="list-style-type: none"> •It must be carried out by qualified, trained personnel and comply with all prevailing local code and regulations. •Please disconnect the DC switch and AC switch before any operation, and wait for at least 5 minutes until the internal bus capacitance discharge completely.
	<ul style="list-style-type: none"> •Do not use the air pump cleaning fan, which may cause fan damage.

When the Growatt MAX series inverter work in high temperature environment, good ventilation and heat dissipation can effectively reduce the chance of load derating. Inverter equipped with internal cooling fans, when the internal temperature is too high, the fans work in to reduce the internal temperature. When the inverter is derating because of the internal temperature is too high, the following are the possible reasons or solutions.

- 1) Fan is blocked or the heat sink gathers too much dust, it needs to clean the fan, fan cover or heat sink.
 - 2) Fan is damaged, it need to replace the fan.
 - 3) Poor ventilation of the installation location, it needs to select the appropriate installation location according to the basic in stallation requirements .
- Fan cleaning and replacement procedure;

1>Please ensure that the DC side and AC side of the inverter have been disconnected before cleaning or replacement of the fan.

- 1) Turn off DC switch.
- 2) Disconnect DC terminals from inverter (Users need tools to disconnect the DC connection terminals).
- 3) Turn off AC switch.

2>Remove the screws on the fan guards with a cross screwdriver. it is shown as below.

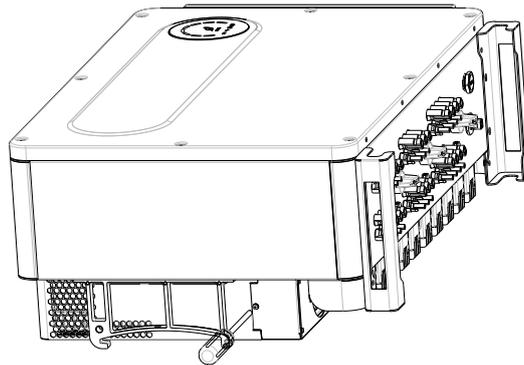


Fig 9.1 External fan view

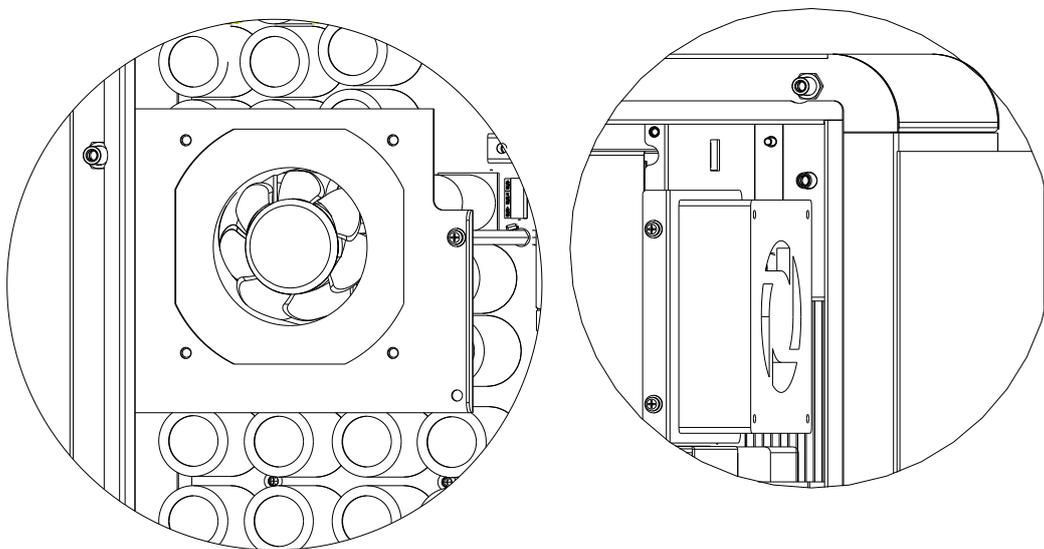


Fig 9.2 Internal fan view

3>Disconnect the wire connector of the fans with a flat head screw driver and remove the fans from the fan guards, it is shown as below.

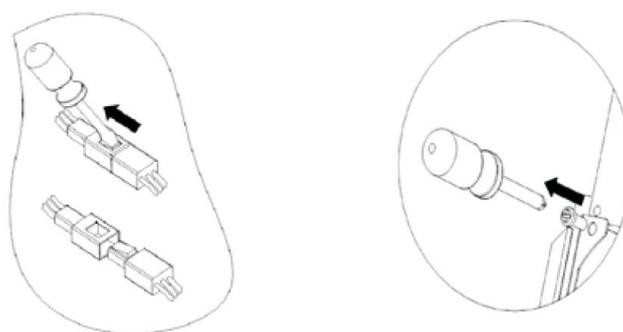


Fig 9.3

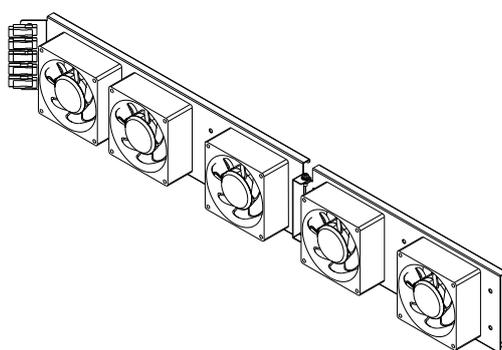


Fig 9.4 External fan view

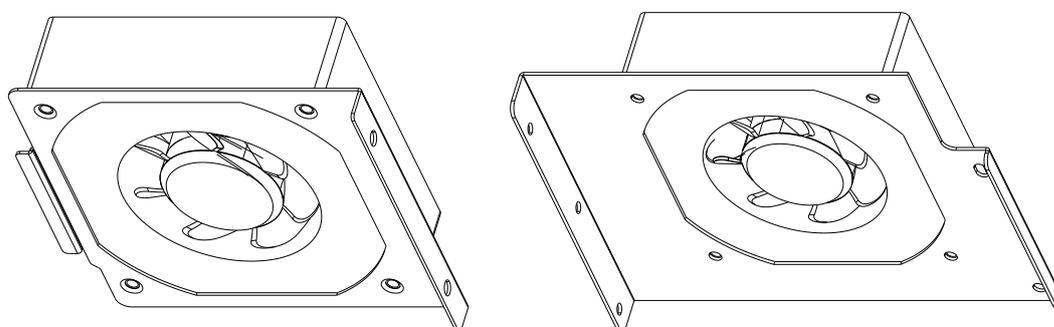


Fig 9.5 Internal fan view

Notice : MAX 80-150KTL3-X LV/MV series inverter has seven fans (internal fan*2Pcs , external fan*5Pcs).

4>Clean fan, fan guards and heat sink or replace fan.

1) Clean the fan and fan guards with air pump, brush or a damp cloth.

2) Remove each fan separately for cleaning if necessary.

3) Remove the fan that need to replace with a cross screwdriver, replace a new fan.

4) Tidy up the wire.

5>Install the fan, fan guard fixed and the inverter again.

9.2 Trouble Shooting

	<ul style="list-style-type: none"> •Work on the Growatt Max must be carried out by qualified personnel. •Normally grounded conductors may be ungrounded and energized when a PV isolation low is indicated. •Risk of electric shock.
---	---

9.2.1 Warning

Warnings identify the current status of the inverter(Max), warnings do not related to a fault and it does not affect the normal running of the inverter. When a warning with a number after it appears in the display, it indicates a warning code and is usually cleared through an orderly shutdown/re-set or a self-corrective action performed by the inverter.

Warning	Description	Suggestion
Warning100	Fan abnormal	Contact Growatt
Warning103	NTC Broken	Contact Growatt
Warning104	DSP and COM firmware version unmatched	Contact Growatt
Warning105	Over Temperature	Contact Growatt
Warning106	SPD abnormal	Contact Growatt
Warning107	NE abnormal	Check if the neutral and ground cables are well connected and firm
Warning108	PV Circuit short	Contact Growatt
Warning109	PV boost driver broken	Contact Growatt
Warning110	String abnormal	Check if the polarity is `reversed or short
Warning111	U disk overcurrent protection	Check if the USB port is connected to a short circuit
Warning112	Countercurrent prevention or Reactive power dispatching failure alarm	Contact Growatt
Warning114	PV fuse abnormal alarm	Contact Growatt

Notice : MAX 80-150KTL3-X LV/MV series inverter has three external fans and one Internal fan.

If the suggestions do not work, please contact to Growatt.

9.2.2 Error

Errors codes identify a possible equipment failure, fault or incorrect inverter setting or configuration, any or all attempts to correct or clear a fault must be performed by qualified personnel.

Typically, the error code can be cleared once the cause or fault is removed.

Some of error code as table shows below, may indicate a fatal error and require you to contact the supplier or Growatt for help.

Error Code	Description	Suggestion
Error 101	Communication error	Contact Growatt
Error 102	Sample of main DSP and slave DSP are inconsistent	Contact Growatt
Error 106	PV CurrSample Fault	Contact Growatt
Error 107	AC CurrSample Fault	Contact Growatt
Error 108	SPS Power Fault	Contact Growatt
Error 110	Current over limit	Contact Growatt
Error112	AFCI Fault	Contact Growatt
Error113	IGBT drive fault	Contact Growatt
Error114	AFCI Module check fail	Contact Growatt
Error117	Relay fault	Contact Growatt
Error120	N - PE fault detection (PV - ground machine)	Contact Growatt
Error121	CPLD abnormal	Contact Growatt
Error122	Bus Fault	Contact Growatt
Error124	No AC connection	Check if the mains connection/mains voltage and frequency are correct
Error125	PV isolation low	Check panel and line insulation to ground is good
Error126	Leakage current too high	Contact Growatt
Error127	Output DC current too high	Contact Growatt
Error128	PV voltage high	Check PV actual voltage
Error129	Grid voltage fault	Check the actual voltage and wiring of the grid
Error130	Grid frequency fault	Check the actual frequency of the grid

10. Specification

Specifications \ Model	MAX 80KTL3-X LV	MAX 100KTL3-X LV	MAX 110KTL3-X LV	MAX 120KTL3-X LV	MAX 125KTL3-X LV
Input Data(DC)					
Max. recommended PV power(for module STC)	120000W	150000W	165000W	180000W	187500W
Max. DC voltage	1100V				
Start voltage	195V				
Nominal voltage	600V				
MPP voltage range	550V-850V	550V-850V	550V-850V	600V-850V	600V-850V
No. of MPP trackers	7	10	10	10	10
No. of PV strings per MPP trackers	2				
Max. input current per MPP trackers	32A				
Max. short-circuit current per MPP trackers	40A				
DC overvoltage category	Category II				
Output Data(AC)					
AC nominal power	80000W	100000W	110000W	120000W	125000W
Max. AC apparent power	88000VA	110000VA	121000VA	132000VA	137500VA
Nominal AC voltage/range	230V/400V 340-440VAC				
AC grid frequency/range	50/60Hz 45-55Hz/55-65Hz				
Max. output current	133.7A	167.1A	183.8A	200.5A	208.9A
Power factor(@nominal)	>0.99				
Max. inrush current/duration	20KA/tr:8us,tf:20us				
Max. output fault current/duration	400A/30us				
Adjustable power factor	0.8leading ...0.8lagging				
THDi	<3%				
AC grid connection type	3W/N/PE				

AC overvoltage category	Category III			
efficiency				
Max. efficiency	98.80%	99.00%	99.00%	99.00%
Euro-eta	98.50%			
Protection devices				
DC reverse-polarity protection	Yes			
DC switch	Yes			
DC Surge protection	Type II			
Insulation resistance monitoring	Yes			
AC surge protection	Type II			
AC short-circuit protection	Yes			
Grid monitoring	Yes			
Anti-islanding protection	Yes			
Residual-current monitoring unit	Yes			
String monitoring	Yes			
Anti-PID function	Optional			
AFCI protection	Optional			
General data				
Dimensions (W /H / D) in mm	970*640*345mm			
Weight	84kg			
Operating temperature range	-30°C- +60°C			
Altitude	4000m			
Internal consumption at	<1W(Note1)			
Topology	Transformerless			
Cooling	Fan cool			
Protection degree	IP66			
Relative humidity	0~100%			
DC connection	CN4U			
AC connection	Cable gland +OT terminal			
Interfaces				
Display	LED/WIFI+APP			
RS485/USB	Yes			
PLC/GPRS/4G	Optional			
Warranty: 5 /10 years	Optional			
Certificates and approvals				

Grid regulation	AS/NZS 4777.2,CEI 0-21,CEI 0-16,VDE-AR-N 4105, DIN V VDE V 0126-1-1,UTE C 15-712-1,EN 50438, IEC 60068,IEC 61683,IEC 62116,IEC 61727, MEA,PEA,DRRG/DEWA:2016,BDEW,G59/3
EMC	EN61000-6-2,EN61000-6-4
Safety	IEC/EN62109-1,IEC/EN62109-2
Note1. Self-consumption less than 15W when AC power supply at night.	

Specifications \ Model	MAX 133KTL3-X LV	MAX 125KTL3-X MV	MAX 136KTL3-X MV	MAX 150KTL3-X MV
Input Data(DC)				
Max. recommended PV power(for module STC)	19950W	187500W	204000W	204000W
Max. DC voltage	1100V			
Start voltage	195V			
Nominal voltage	600V	720V	720V	720V
MPP voltage range	600V-850V	600V-850V	685V-850V	685V-850V
No. of MPP trackers	10			
No. of PV strings per MPP trackers	2			
Max. input current per MPP trackers	32A			
Max. short-circuit current per MPP trackers	40A			
DC overvoltage category	Category II			
Output Data(AC)				
AC nominal power	133000W	125000W	136000W	150000W
Max. AC apparent power	146300VA	137500VA	149600VA	165000VA
Nominal AC voltage/range	230V/400V 340-440VAC	277V/480V 408-528VAC	277V/480V 408-528VAC	277V/480V 408-528VAC
AC grid frequency/range	50/60Hz 45-55Hz/55-65Hz			
Max. output current	222.3A	165.4A	179.9A	198.5A
Power factor(@nominal	>0.99			
Max. inrush current/duration	20KA/tr:8us,tf:20us			
Max. output fault	400A/30us			

current/duration				
Adjustable power factor	0.8leading ...0.8lagging			
THDi	<3%			
AC grid connection type	3W/N/PE	3W+PE	3W+PE	3W+PE
AC overvoltage category	Category III			
Efficiency				
Max. efficiency	98.80%	99.00%	99.00%	99.00%
Euro-eta	98.50%			
Protection devices				
DC reverse-polarity protection	Yes			
DC switch	Yes			
DC Surge protection	Type II			
Insulation resistance monitoring	Yes			
AC surge protection	Type II			
AC short-circuit protection	Yes			
Grid monitoring	Yes			
Anti-islanding protection	Yes			
Residual-current monitoring unit	Yes			
String monitoring	Yes			
Anti-PID function	Optional			
AFCI protection	Optional			
General data				
imensions (W / H / D) in mm	970*640*345mm			
Weight	84kg			
Operating temperature range	-30°C- +60°C			
Altitude	4000m			
Internal consumption at	<1W(Note1)			
Topology	Transformerless			
Cooling	Fan cool			
Protection degree	IP66			
Relative humidity	0~100%			
DC connection	CN4U			
AC connection	Cable gland +OT terminal			
Interfaces				
Display	LED/WIFI+APP			

RS485/USB	Yes
PLC/GPRS/4G	Optional
Warranty: 5 /10 years	Optional
Certificates and approvals	
Grid regulation	AS/NZS 4777.2,CEI 0-21,CEI 0-16,VDE-AR-N 4105, DIN V VDE V 0126-1-1,UTE C 15-712-1,EN 50438, IEC 60068,IEC 61683,IEC 62116,IEC 61727, MEA,PEA,DRRG/DEWA:2016,BDEW,G59/3
EMC	EN61000-6-2,EN61000-6-4
Safety	IEC/EN62109-1,IEC/EN62109-2
Note1. Self-consumption less than 15W when AC power supply at night.	

11. Decommissioning

If the inverter does not operate in the future, it needs to be properly disposed. The steps are as follows:

- 1> Disconnect the external AC short-circuit device and prevent reconnection due to misoperation.
- 2> Turn the DC switch to "OFF" position.
- 3> Wait at least 5 minutes until the internal capacitor discharge is completed.
- 4> Disconnect the AC connector.
- 5> Disconnect the DC connector.
- 6> Remove the inverter from the wall.
- 7> Disposing of the inverter.

11.1 Disposing Of The MAX Series Inverter

	<p>Do not dispose of MAX 80-150KTL3-X LV/MV series inverter together with household waste. Please accordance with the disposal regulations for electronic waste which apply at the installation site at that time. Ensure that the old unit and, where applicable, any accessories are disposed of in a proper manner.</p>
---	--

12. Quality assurance

Please refer to related file.

13. Contact

If you have technical problems concerning our products, contact your installer or Growatt, please provide information below for better support.

1. Inverter type
2. Serial number of inverter
3. Error code of inverter
4. LED status of inverter
5. DC input voltage of inverter (Modules information)
6. Inverter communication method

Guangdong Growatt New Energy Co., LTD
No.28 Guangming Road, Shiyan Street, Bao'an District, Shenzhen, PR. China
T : +86 0755 2747 1942
E : service@ginverter.com
W : www.ginverter.com